

# Autonics

## ROTARY ENCODER(Absolute Type)

### EPM50 SERIES

# M A N U A L



Thank you very much for selecting Autonics products.  
For your safety, please read the following before using.

#### Caution for your safety

- ※Please keep these instructions and review them before using this unit.
- ※Please observe the cautions that follow;
- Warning** Serious injury may result if instructions are not followed.
- Caution** Product may be damaged, or injury may result if instructions are not followed.
- ※The following is an explanation of the symbols used in the operation manual.
- ⚠Caution: Injury or danger may occur under special conditions.

#### Warning

1. In case of using this unit with machinery (Ex: nuclear power control, medical equipment, ship, vehicle, train, airplane, combustion apparatus, safety device, crime/disaster prevention equipment, etc) which may cause damages to human life or property, it is required to install fail-safe device.
- It may cause a fire, human injury or damage to property.


#### Caution

1. Do not drop water or oil on this unit.  
It may cause damage or malfunction due to malfunction.
2. Please observe voltage rating.  
It may shorten the life cycle or damage to the product.
3. Please check the polarity of power and wrong wiring.  
It may cause damage to this unit.
4. Do not short circuit the load.  
It may cause damage to this unit.

#### Ordering information

EPM50S	8	10	13	B	PN	24	S
	Cable		S	Side outgoing cable type			
	Power supply		24	12-24VDC± 5%			
	Control output		PN	Parallel NPN open collector			
	Output code		S	SSI			
	Multi-turn		B	Binary Code			
	Single-turn		13	13bit(8192 revolution)			
	Shaft diameter		10	10bit(1024 division)			
	Item		8	ø 8mm			
			EPM50S	Diameter ø 50mm			


#### Synchronous serial interface (SSI) Output Timing diagram

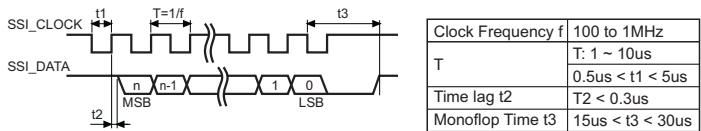


#### Synchronous serial interface (SSI) Data Output

Clock input bit	Data output name	Data output bit	Clock input bit	Data output name	Data output bit
1	Over flow error bit	0 bit	15	9 bit(MSB)	9 bit
2	Multi-turn count	12 bit(MSB)	16	8 bit	8 bit
3		11 bit	17	7 bit	7 bit
4		10 bit	18	6 bit	6 bit
5		9 bit	19	5 bit	5 bit
6		8 bit	20	4 bit	4 bit
7	Single-turn data	7 bit	21	3 bit	3 bit
8		6 bit	22	2 bit	2 bit
9		5 bit	23	1 bit	1 bit
10		4 bit	24	0 bit(LSB)	0 bit
11		3 bit			
12		2 bit			
13		1 bit			
14		0 bit(LSB)			

#### Parallel Interface 1024 division single-turn data output waveform

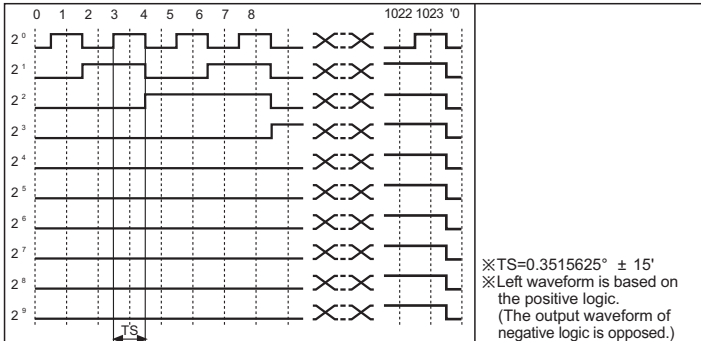

#### Parallel Interface 8192 revolution multi-turn count data output waveform

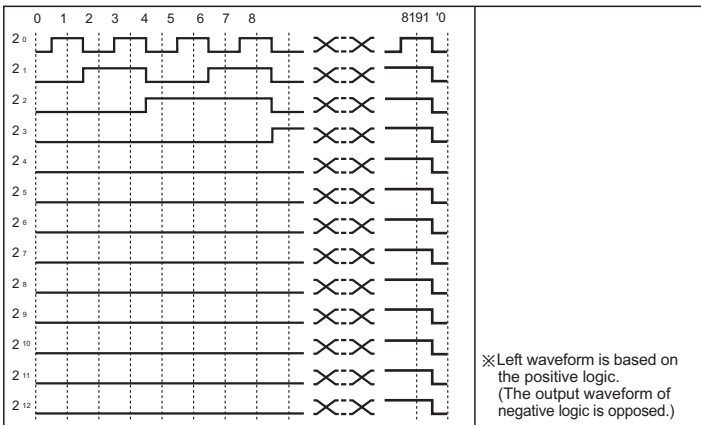

#### Specifications

Type	ø 50mm Multi-turn absolute encoder	
Model	EPM50S8-1013-B-S-24	EPM50S8-1013-B-PN-24
Resolution	Single-turn	1024 division(10Bit)
	Multi-turn	8192 revolution(13Bit)
Rotation limit when power is off	± 90°*1	
Output	Output code	24bit, Binary 2 code
	Output Interface	SSI(Synchronous Serial Interface)
	Output type	Parallel
	Output signal	Single-turn data, Multi-turn count, OVF alarm*2
	Line driver output	-Low: Sink current - max. 20mA, Residual voltage - max. 0.5VDC -High: Sink current - max. -20mA, Output voltage - max. 2.5VDC
NPN open collector output	Logic	-
	Response time	-
	Sink current	Max. 32mA, Residual voltage: Max. 1VDC
	Negative logic output	-
Electrical specification	Input signal	Single-turn data reset*3, Multi-turn count reset*4, Direction, Clear
	Input level	High : 5-24VDC, Low : 0-1.2VDC
	Input logic	Low Active*5, HIGH or OPEN for common use
	Input time	Direction : Over 100ms
		Single-turn data reset : Over 100ms
		Multi-turn count reset : Over 100ms
	Clear : Over 100ms	
	No Latch function	-
	Latch : Over 500µs	
	SSI Clock Input Frequency	100kHz~1MHz
Max. Response frequency	-	
Power supply	12-24VDC ± 5%(Ripple P-P : Max. 5%)	
Current consumption	Max. 150mA(Disconnection of the load)	Max. 100mA(Disconnection of the load)
	Min. 100MΩ (At 500VDC between all terminals and case)	
Insulation resistance	750VAC 50/60Hz for 1 minute(Between all terminals and case)	
Dielectric strength	750VAC 50/60Hz for 1 minute(Between all terminals and case)	
Connection	Cable outgoing type(Cable gland)	
Mechanical specification	Starting torque	Max. 40gf·cm(0.004N·m)
	Moment of inertia	Max. 40g·cm <sup>2</sup> (4× 10 <sup>-4</sup> kg·m <sup>2</sup> )
	Shaft loading	Radial: 10kgf, Thrust : 2.5kgf
Max. revolution	3000rpm*6	
Vibration	1.5mm amplitude at frequency of 10 to 55Hz (for one minute cycle) in each of X, Y, Z direction for 2 hours	
Shock	Max. 50G	
Ambient temperature	-10 to 70°C, Storage: -25 to 85°C	
Ambient humidity	35 to 85%RH, Storage: 35 to 90%RH	
Protection	IP64(IEC standard), Side outgoing cable type: IP50(IEC standard)	
Cable	ø 6mm 10P, Length: 2m, Shield cable (AWG28, Thickness of core wire : 0.08mm, Number of core wire : 19, Insulation diameter: ø 0.8mm)	ø 6mm 17P×2, Length: 2m, Shield cable (AWG28, Thickness of core wire : 0.08mm, Number of core wire : 17, Insulation diameter: ø 0.8mm)
	Accessories: Mounting bracket, coupling	
Approval	CE	
Unit weight	Approx. 322g	Approx. 475g

\*1: It calibrates the multi-turn counts by comparing single-turn data before/after power off without counting multi-turn counts when power is off. It shall be used on the condition that no over-rated revolution occurred since proper multi-turn data may not be available if any revolutions occurred over ± 90° from the position when power is off.

\*2: OVF alarm is ON when multi-turn count is out of counting range (0~8191 revolution). It shall be initialized by changing the setting of Direction or applying multi-turn count reset or Clear signals.

\*3: Single-turn data shall be initialized as '0' when single-turn data reset is input.

\*4: Multi-turn count shall be initialized as '0 revolution' when multi-turn count reset is input.


\*5: High Active is optional.

\*6: In case of Parallel type model, select the resolution to make max. Response revolution is lower than max. Allowable revolution.

$$\text{Max. Allowable Revolution (rpm)} = \frac{\text{Resolution}}{\text{Max. Response Revolution (rpm)}} \times 60 \text{ sec}$$

※Environment resistance is rated at no freezing or condensation.


#### Dimensions

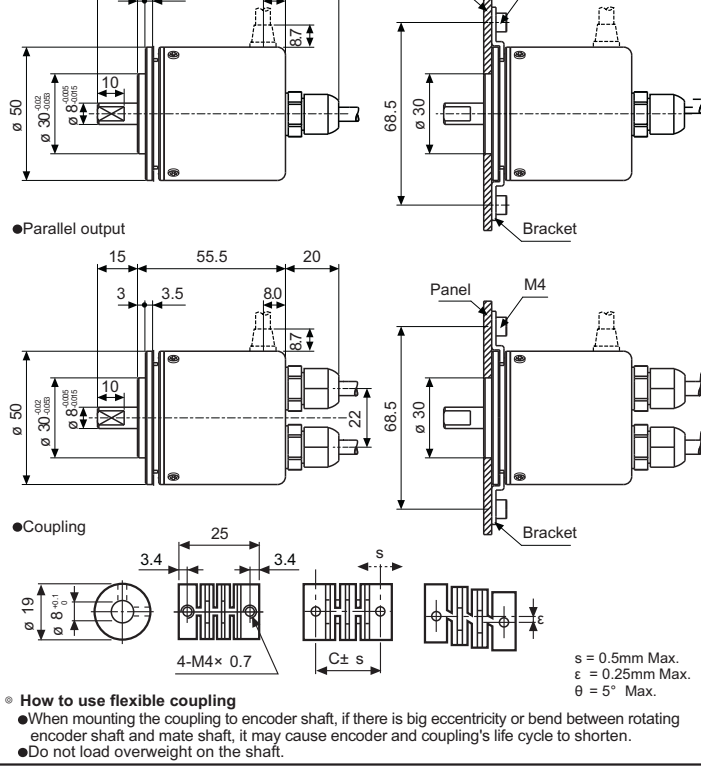

#### Functions

- **Single-turn data reset**  
Single-turn data will be initialized as '0' when GND(low level) is input over 100ms on single-turn data reset line. In case of not using single-turn data reset line, connect the line to OPEN or +V(High level).
- **Multi-turn count reset**  
Multi-turn data will be initialized as 'revolution 0' when GND(Low level) is input over 100ms on multi-count reset line. In case of not using multi-turn count reset line, connect the line to OPEN or +V(High level). OVF alarm will be initialized with multi-turn count reset input.
- **Clear**  
Single-turn data will be initialized as '0' and multi-count will be also initialized as 'revolution 0' when GND (Low level) is input over 100ms on Clear line. In case of not using clear line, connect the line to OPEN or +V(High level). OVF alarm will be initialized with clear input.
- **Direction**  
Connect Direction line to OPEN or +V(High level) and turn on the power. Output will increase when rotation direction is CW from shaft axis. In case of connecting to GND(Low level), output will increase when rotation direction is CCW. If direction setting is reset, single-turn data, multi-turn count and OVF will be reset together since direction setting is initial setting which is set with POWER ON.
- **Latch(Parallel output model only)**  
When connecting latch line to GND(Low level) over 500µs, outputs for single-turn data, multi-turn count and OVF at latch point will be remained. When latch line is connected to OPEN or +V (High level), output will be returned to operating mode output.
- **OVF**  
It is an alarm function providing output when multi-turn count is out of rotation ranges(0 to 8191 revolutions). OVF will be initialized through direction setting change, multi-turn count reset or clear input.

#### Control output I/O Circuit

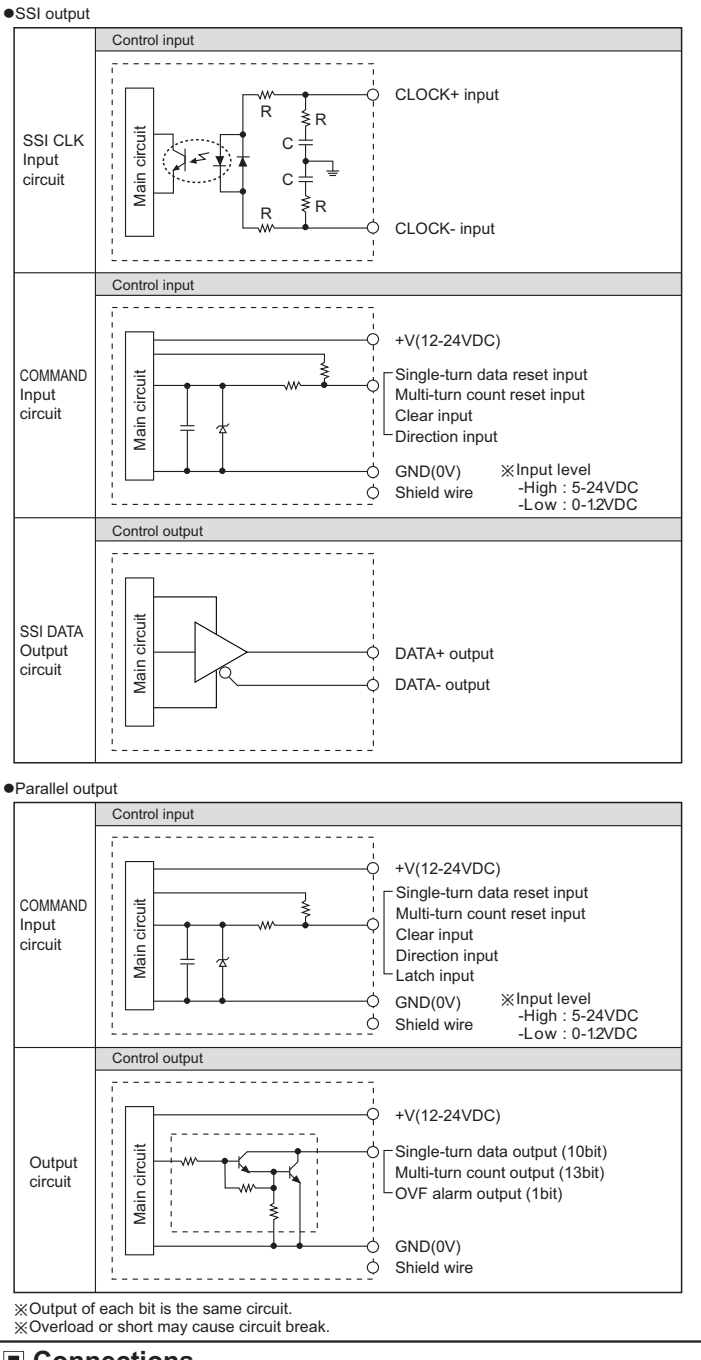

#### Connections

Cable color	Description	Cable color	Description
Brown	CLOCK+	Gray	Single-turn data reset
Red	CLOCK-	Blue	Multi-turn count reset
Orange	DATA+	Purple	Clear
Yellow	DATA-	Green	Direction
White	+V (12-24VDC)		
Black	GND (0V)		
Shield wire	Signal shield cable(F.G)		

Multi-turn count cable (Sheath color: Black)		Single-turn data cable (Sheath color: Gray)	
Cable color	Description	Cable color	Description
Brown	2 <sup>0</sup>	Brown	2 <sup>0</sup>
Red	2 <sup>1</sup>	Red	2 <sup>1</sup>
Orange	2 <sup>2</sup>	Orange	2 <sup>2</sup>
Yellow	2 <sup>3</sup>	Yellow	2 <sup>3</sup>
Green	2 <sup>4</sup>	Green	2 <sup>4</sup>
Blue	2 <sup>5</sup>	Blue	2 <sup>5</sup>
Purple	2 <sup>6</sup>	Purple	2 <sup>6</sup>
Gray	2 <sup>7</sup>	Gray	2 <sup>7</sup>
Pink	2 <sup>8</sup>	Pink	2 <sup>8</sup>
Clear	2 <sup>9</sup>	Clear	2 <sup>9</sup>
Light brown	2 <sup>10</sup>	Light brown	No connection
Light yellow	2 <sup>11</sup>	Light yellow	Direction
Light green	2 <sup>12</sup>	Light green	Latch
Light blue	OVF	Light blue	Clear
Light purple	Multi-turn count reset	Light purple	Single-turn data reset
White	+V(12-24VDC)	White	+V(12-24VDC)
Black	GND(0V)	Black	GND(0V)
Shield wire	Signal shield cable(F.G)	Shield wire	Signal shield cable(F.G)

- ※Do the wiring properly.
- ※Encoder's metal case and shield cable must be grounded (F.G).
- ※Do the wiring with care for short since dedicated Driver IC is used for I/O circuit.
- ※As for Parallel output, it is recommended to connect +V and GND of both multi-turn count cable and single-turn data cable.

#### Caution for using

1. Installation
    - ① Handle the unit with care since it consists of precision components.
    - ② Be careful not to make eccentricity and deflection angle larger, it may shorten the life cycle.
    - ③ Do not put strong impact when insert coupling into shaft.
  2. For using
    - ① Please connect shield wire to F.G terminal.
    - ② Do not connect and cut circuit during power on, or it may cause damage to the unit.
    - ③ When using switching power, install the surge absorber on power line and make the wire as short as possible to avoid noise.
  3. Environment
    - ① Please do not use this unit with below environment, it may cause malfunction.
      - ① Place where this unit or component may be damaged by strong vibration or impact.
      - ② Place where there are lots of flammable or corrosive gases.
      - ③ Place where strong magnet field or electric noise occurs.
      - ④ Place where is beyond of rating temperature or humidity.
      - ⑤ Place where strong acids or alkali near by.
  4. Vibration and Impact
    - ① When the strong impact loads on this unit, it may cause an error.
    - ② Please use Bracket for more stable unit mounting.
    - ③ Please use metallic coupling when the application needs severe acceleration or deceleration frequently.
  5. Wire connection
    - ① Do not draw the wire with over strength 30N after wiring.
    - ② If wire encoder cable with high voltage line or power cable in the same conduit, it may cause a malfunction or mechanical problem. Please wire it separately and use separated conduit.
- ※It may cause malfunction if above instructions are not followed.

#### Major products

<ul style="list-style-type: none"> <li>■ Proximity sensors</li> <li>■ Area sensors</li> <li>■ Door/Door side sensors</li> <li>■ Counters</li> <li>■ Rotary encoders</li> <li>■ Power controllers</li> <li>■ Panel meters</li> <li>■ Temperature controllers</li> <li>■ Tachometer/Pulse(Rate) meters</li> <li>■ Temperature/Humidity transducers</li> <li>■ Switching power supplies</li> <li>■ Stepping motors/drivers/motion controllers</li> <li>■ Field network devices</li> <li>■ Laser marking system(CO2, Nd:YAG)</li> <li>■ Laser welding/soldering system</li> </ul>	<ul style="list-style-type: none"> <li>■ Photoelectric sensors</li> <li>■ Fiber optic sensors</li> <li>■ Pressure sensors</li> <li>■ Timers</li> <li>■ Display units</li> <li>■ Sensor controllers</li> <li>■ Graphic/Logic panels</li> </ul>	<p><b>Autonics Corporation</b> http://www.autonics.com</p> <p>Satisfiable Partner For Factory Automation</p> <p>HEAD QUARTERS : 41-5, Yongdang-dong, Yangsan-si, Gyeongsang, 626-847, Korea</p> <p>OVERSEAS SALES : Bldg. 402 3rd Fl., Bucheon Techno Park, 193, Yaldae-dong, Wonmi-gu, Bucheon-si, Gyeonggi-do, 420-734, Korea TEL: 82-32-619-2730 / FAX: 82-32-329-0728 E-mail: sales@autonics.com</p> <p>The proposal of a product improvement and development: product@autonics.com</p>
---	---	---